

# Pantech ADR930 Perception

## USERS MANUAL

### FRONT VIEW



### REAR VIEW



## Key Functions

### FRONT VIEW

- 1. Earpiece:** Listen to callers. In Speakerphone mode, captures your voice. While recording video, captures audio. Avoid covering the sub-microphone during Speakerphone mode or when recording video.
- 2. Microphone:** Allows callers to hear your voice and when recording.
- 3. Volume Keys:** From the Home screen, press to adjust Master Volume. During calls or music playback, press to adjust volume. Press to mute the ringtone of an incoming call.
- 4. Proximity Sensor:** Detects the presence of nearby objects to control screen display, such as when you hold the phone to your ear during a phone call.
- 5. Front Camera:** Used when taking self-photos or recording videos.
- 6. Touchscreen:** Allows a user to interact with the phone by touching areas on the screen.

### REAR VIEW

- 1. Micro USB/Charger Port:** Connect a USB cable / Charger cable for charging or to sync music and files.
- 2. Speaker:** Plays ringtones, call audio when in Speakerphone mode, music and other sounds.
- 3. Power/Lock Key:** Press and hold to turn the phone on or off. Press to lock the phone, or to wake the screen for unlocking.
- 4. Headset Jack:** Plug in an optional headset or TTY equipment.
- 5. Rear Camera:** Used when taking photos or recording videos.
- 6. Flash:** Used when taking photos to brighten up scenery.
- 7. NFC Touchpoint:** allows users to exchange data, such as a contact or webpage, between NFC-enabled smartphones.

## Getting Started

### THE BATTERY

#### Installing the battery

- Use the groove at the bottom of the smartphone to lift the cover from the smartphone.
- Insert the battery into the phone, aligning the gold contacts on the battery with the gold contacts in the phone. Push down on the bottom of the battery until it snaps into place.
- Replace the cover. Insert the top of the cover, press the sides into place, and then press the bottom into place.

#### Removing the battery

- Remove the battery cover.
- Lift the battery up and out of the phone, using the slot provided.
- Replace the battery cover.



## Charging the battery

1. Insert the small end of the Charger cable into the Micro USB/Charger port.

2. Plug the large end of the charger into an electrical outlet to begin charging.

A computer can also be used to charge the smartphone by connecting via a USB cable.



Any Micro USB charger will work to charge, your phone may display a message that it is not preferred, however it will charge the phone properly.

## Turning Your Phone On / Off

### Turning Your Phone On

• Press and hold the **Power/Lock Key** for a few seconds until the screen lights up.

### Turning Your Phone Off

1. Press and hold the **Power/Lock Key** until the pop-up menu appears.

2. Touch **Power off** in the pop-up menu.

3. Touch **OK** to confirm that you want to turn off the phone.

## Lock / Unlock Your Phone

### Locking Your Phone

• Pressing the **Power/Lock Key** turns the screen off and puts the smartphone in lock mode.

### Unlocking Your Phone

• To unlock the Smartphone, press the **Power/Lock Key** to turn the screen on, then swipe the lock icon .

## Messaging

### Send A Text

1. From the Home screen, touch  **Messaging** > **New message** .

2. Tap the **To** field and enter the recipient's name, phone number or Email address.

3. Touch the **Type to compose** field and compose your message. While composing a message, touch  **Menu** for these options:

- **Add subject:** Add a subject field to the message and enter a subject. (This option also converts the message to MMS.)

- **Attach:** Add content to the message to convert it to MMS.

• **Pictures:** Add a picture, or take a picture.

• **Videos:** Add a video, or take a video.

• **Audio:** Add a voice memo or record a voice memo.

• **Slideshow:** Add a slideshow of pictures to this message.

- **Insert text:** Select text from Contacts, Bookmarks or Quick Text to add to the message or just add text/ message.

- **Insert smiley:** Add a text emoticon to the message.

4. Touch  to send the message.

## Phone Features

### Wi-Fi

When you turn Wi-Fi service on, your phone automatically searches for available, in range WAPs (Wireless Access Points).

#### Turning Wi-Fi On:

1. From the Home screen, swipe your finger downward to display the Notification Panel.

2. Touch Wi-Fi, then swipe the toggle switch from **Off** to **On** to turn Wi-Fi On.

#### Turning Wi-Fi Off:

1. From the Home screen, swipe your finger downward to display the Notification Panel.

2. Touch Wi-Fi, then swipe the toggle switch from **On** to **Off** to turn Wi-Fi Off.

### Scanning and Connecting to a Wi-Fi Network:

When you turn on Wi-Fi, your phone searches for available Wi-Fi connections, then displays them on screen.

• When your phone completes a scan, touch a Wi-Fi network to connect. If the Wi-Fi network is open, you will be automatically connected. If the Wi-Fi network is secured, enter the password at the prompt to connect.

***NOTE:** When you are connecting to a Wi-Fi network you are not using any data on your data plan. We recommend turning on and connecting to a Wi-Fi whenever possible.*

### Bluetooth Function

Search for a Bluetooth device and pair with it, to exchange information between your phone and the device.

1. From the Home screen, touch  **Menu** > **Settings**.

2. Under **Wireless & Networks**, touch **Bluetooth**.

3. Activate the target device's discoverable mode.

4. Touch **Search for Devices**.

5. From the list of scanned devices, touch the target device, then follow the prompts to complete the pairing:

• If the target device requires a PIN, enter a PIN for the target device and touch OK. When prompted, enter PIN on the target device.

*\*Bluetooth will decrease battery life. Only leave it on if you are connected to a bluetooth device.*

### Accessing Internet

1. From the Home screen, click on applications, select **Browser**.

2. Touch the **URL** field at the top of the screen, then enter the URL using the virtual QWERTY keyboard.

3. As you enter characters, potential matches display. Continue entering characters or touch a match to complete the URL.

4. Touch **Enter**  on the keyboard to load the page.

## Voicemail

### Checking Voicemail

1. Touch **\*86** in the keypad.

2. Follow the voice prompt directions.

## Camera and Video

### Take Photos

1. From the Home screen, touch  **Applications** > **Camera**.

2. Using the display as a viewfinder, compose your picture by aiming the lens at the subject.

• Touch the screen to focus on the area you touched.

• Use the slider to zoom in and out. Spread and pinch gestures are also available to zoom in and out.

3. To take the picture, touch the **Camera** button.



### Record Videos

1. From the Home screen, touch  **Applications** > **Camera**.

• Tap the camera mode icon  and select  to switch to video mode.

2. Using the display as a viewfinder, compose your shot by aiming the lens at the subject.

• Press the **Volume Key** to zoom in or out.

3. To start recording, touch the **Record** button.

4. To stop recording, touch the **Stop** button.

***NOTE:** Pictures and videos can use large amounts of available space. If you plan to store these on your phone we recommend purchasing a large capacity SD card.*



## Making and Answering Calls

### Making Calls

Several methods are available for calling, as follows:

• Enter a phone number using the dialpad, then tap the handset icon . As the number is entered, previously dialed numbers that match appear in a list. Choose one, if appropriate.

• Tap Recent, then select a call from the history of incoming and outgoing call.

• Tap Favorites, then select a contact from the list of favorite contacts.

• Tap the contacts icon , then select a contact from the contacts list.

### Answering Calls

• Tap **Answer** to receive an incoming call, or tap **Ignore** to decline it. To decline a call and send a message to the caller, tap **Send MSG**.

• If a call comes in when the screen is off, drag the green handset icon to the center to answer it. To decline it, drag the red handset icon to the center.

### Answering Call-Waiting Calls

• While on a call, tap **Answer** to answer another call. To switch between the two calling parties, tap **Swap**.