

# SAMSUNG I110 ILLUSION

## USERS MANUAL



### Key Functions - Front

- 1. Proximity and Light Sensors:** Detects the presence of nearby objects to control screen display, such as when you hold the phone to your ear during a phone call. Detects ambient light to determine screen brightness when the Automatic brightness setting is enabled, and when taking pictures.
- 2. Menu Key:** Press to display options for the current screen.
- 3. Home Key:** Press to display the Home screen. Press and hold to display recent applications or launch Task Manager.
- 4. Back Key:** Press to return to the previous screen or option.
- 5. Search Key:** Press to launch Google Search, to search your device or the web.
- 6. Earpiece:** Use during calls to listen to callers.

### Key Functions - Side

- 1. Volume Key:** From the Home screen, press to adjust Master Volume. During calls or music playback, press to adjust volume. Press to mute the ringtone of an incoming call.
- 2. Memory Card Slot:** Open to insert a memory card for storage of pictures, music, and other files.
- 3. Power/Lock Key:** Press and hold to turn the phone on or off. Press to lock the phone, or to wake the screen for unlocking.

### Key Functions - Back

- 1. 3 Megapixel Camera Lens:** Used when taking photos or recording videos.
- 2. USB/Power/Accessory Port:** Connect a USB cable for charging or to sync music and files.
- 3. Microphone:** Use during calls to allow callers to hear your voice, and when recording.
- 4. External Speaker:** Plays ringtones, call audio when in Speakerphone mode, music and other sounds.
- 5. 3.5mm Headset Jack:** Plug in an optional headset or TTY equipment.

### Getting started

#### Install the battery

1. Pull on the indentation on the top of the battery cover to remove it.
2. Insert the battery into the phone, aligning the gold contacts on the battery with the gold contacts in the phone. Push down on the bottom of the battery until it snaps into place.
3. Align the cover at the bottom and press it firmly into place, making sure it snaps into place at the sides and top.

#### Remove the battery

1. Remove the battery cover.
2. Lift the battery up and out of the phone, using the slot provided.
3. Replace the battery cover.

#### Charge the battery

1. Insert the charger cable into the port.
2. Plug the charging head into a standard AC power outlet.
3. When charging is complete, unplug the charging head from the power outlet and remove the cable from the phone.

#### Turning Your Phone On/Off

Press and hold  **Power/Lock** key for 3 seconds to turn phone on or off.

**CONTINUED ON BACK**

## Unlocking The Screen

By default, the phone locks automatically when the screen times out, or you can lock it manually. You can unlock the phone using one of the default Unlock screens, or for increased security, use a personal screen unlock pattern.

### Locking the Phone Manually:

- Press the **Power/Lock Key** on the side of the phone while the screen is on.

### Unlocking the Phone Manually:

- Press the **Power/Lock Key** to wake the screen.
- Touch and drag a puzzle piece to fit it into the empty space. Special puzzle pieces display for missed calls or new messages. Drag a missed call or message puzzle piece to the empty space to view the message or call log.

### Setting Increased Security:

- Press the **Menu Key** > **Settings** > **Location & Security** > **Set Screen Lock/Change Screen Lock**.
- Choose Options: None, Pattern, PIN or Password.
- Follow the onscreen instructions to set a new Screen Lock.

 
## Making Calls

1. From a Home screen, touch **Phone**.
2. Touch the digits of the telephone or speed dial number on the Dialer keypad. While dialing, use these options:
  - Touch **Menu** > **Add to Contacts** to add the number you entered to a new contact, or to update an existing contact.
  - Touch **Menu** > **Speed Dial Setting** to dial or set Speed Dials.
  - Touch **Menu** > **Add 2 Sec Pause** to insert a 2-second pause in the telephone number.
  - Touch **Menu** > **Add Wait** to insert a Wait pause in the telephone number, to pause dialing to wait for input from you.
3. Touch **Call** to place the call.

### Making Calls from Contacts:

A contact is an entry that you have created to store the name, numbers, and other information for people/groups of interest.

1. From **Home** screen, touch **Contacts**.
2. Find the contact and touch it to open the **Contact** entry.
3. Touch **Call** to dial the default number for the Contact.

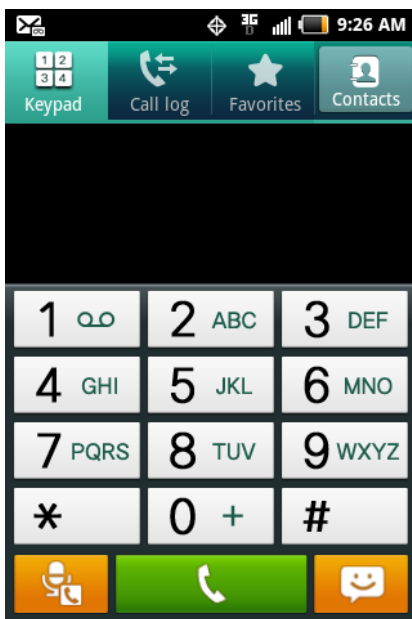

## Answering Calls

You can answer incoming calls when phone is locked or unlocked.

With the phone unlocked, touch **Answer**.

– or –

With the phone locked, touch and drag the **Answer** puzzle piece to the empty space.

### Ending a Call:

- Touch **End Call**.

## Voicemail

### Setting Up Voicemail:

1. From the homescreen, touch **Voicemail**.
2. Touch and hold **1** (the number 1) to call or dial \*86.
3. Follow the automated instructions to set up your new password and record a greeting.

### Checking Voicemail:

1. From the homescreen, touch **Voicemail**.
2. Touch and hold **1** (the number 1) to call or dial \*86.
3. Enter your password.
4. Follow voice prompts.

– or –

*When you receive a voicemail, an icon will appear in your notifications.*

1. Pull down the notifications bar.
2. Touch the new voicemail. Phone will automatically call.
3. Enter your password.
4. Follow voice prompts.

## Text Messaging

1. From the Home screen, touch **Messaging** > **New message**.

2. Tap the **To** field and enter the recipient's name, phone number or email address.
3. Touch the **Type to compose** field and compose your message. While composing a message, touch **Menu** for these options:

- **Add subject:** Add a subject field to the message and enter a subject. (This option also converts the message to MMS.)

- **Attach:** Add content to the message to convert it to MMS.

- **Pictures:** Add a picture.
- **Capture picture:** Take a new picture.
- **Videos:** Add a video.
- **Capture video:** Record a new video.
- **Audio:** Add a sound clip.
- **Record audio:** Create a new audio clip.
- **Slideshow:** Add a slideshow of pictures to this message.

- **Add text:** Select text from Contacts, Calendar or Memo to add to the message or just add text/message.

- **Insert smiley:** Add a text emoticon to the message.

- **Discard:** Cancel the message.

*(Options may vary depending on which keyboard is selected.)*

4. Touch **Send** to send the message.

## Turning Wi-Fi On/Off

1. From the Home screen, sweep your finger downward to display the Notification Panel.
2. Touch **Wi-Fi** to turn Wi-Fi On/Off.

## Accessing Internet

Your phone is equipped with a full HTML Browser, which allows you to access the internet.

- From the **Home** screen, click on **Applications**, select **Browser**.

## Turning Bluetooth On/Off

 
1. From the Home screen, sweep your finger downward to display the Notification Panel.
2. Touch **Bluetooth** to turn Bluetooth On/Off.

## Taking Pictures

1. From the Home screen, touch **Applications** > **Camera**.
2. Using the display as a viewfinder, compose your picture by aiming the lens at the subject.
  - Touch the screen to focus on the area you touched.
  - Press the **Volume Key** to zoom in or out.
3. To take the picture, touch the **Camera** button.
4. After taking a picture, touch **Image Viewer** to view the picture. While viewing the picture, use these options:

**NOTE:** *If options don't appear, tap on the picture.*

- Touch the zoom icons to zoom incrementally, or double-tap on the picture to zoom all the way in or out.
- Touch **Delete** to erase the picture.
- Touch **Share** to send the picture via **AllShare, Bluetooth, Email, Gmail, Messaging, or Picasa**.
- Touch **Set as** to assign the picture as a contact icon, or as wallpaper.
- Touch **Back** to return to the Camera to take more pictures.

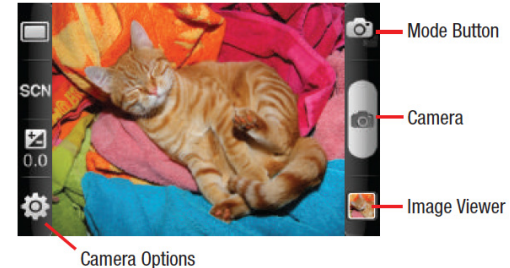

## Taking Video

1. From the Home screen, touch **Applications** > **Camera** > **Mode**.
2. Using the display as a viewfinder, compose your shot by aiming the lens at the subject.
  - Press the **Volume Key** to zoom in or out.
3. To start recording, touch the **Record** button. During recording, the button changes to **Pause**; touch **Pause** to temporarily stop recording. To resume recording, touch **Record** again.
4. To stop recording, touch the **Stop** button.
5. After recording, touch **Image Viewer** to view the video. While viewing the video, use these options:
  - Double-tap on the video to zoom all the way in or out.
  - Touch **Share** to send the video via **AllShare, Bluetooth, Email, Gmail, Messaging, or YouTube**.
  - Touch **Play** to review the video.
  - Touch **Delete** to erase the video.
  - Touch **Back** to return to the Camcorder to record more videos.

**NOTE:** *Pictures and videos can use large amounts of available space. If you plan to store these on your phone we recommend purchasing a large capacity SD card.*