

If you have any questions, please contact Affinity Cellular at 833-679-1090 or by dialing 611 from your Affinity Cellular phone.

ZTE 233 VWS

Quick Guide Manual



Key	Description
Power/End Key	Press and hold to turn Airplane mode on or off, restart, or to power off. Press to end or cancel a call. Press to return to the home screen
Left Soft Key/ Right Soft Key	Press to select the options at the left/right corner of the bottom of the display. The options change depending on the application/function in use.
Recent Apps Key	Press to see recently used applications
Volume Up/Down Key	Press or hold to turn the volume up or down
Camera Key	Press to launch the camera from the home or apps screen, or take a picture when the Camera app is already launched.
Send Key	Press to place or answer a call. Press to launch the Recent Calls app from the home screen to view recent calls.
Clear Key	Press to delete text or numbers before the cursor
4-Way Navigation Key	Press up/down/left/right to access designated functions from the home screen, navigate options on the display, or move the cursor
Center	Press to select a highlighted item on the screen or perform the function at the bottom center of the display
Vibration Mode Key	From the home screen, press and hold to activate/deactivate vibration mode. In a text-editing screen, press and hold to change input mode.

Charging the Battery

1. Connect the adapter to the charging port. Ensure that the adapter is inserted with the correct orientation.

NOTE: Do not force the connector into the charging port.



2. Connect the charger to a standard AC wall outlet. If the phone is on, you'll see a charging icon, such as or , appear in the Status Bar.

3. Disconnect the charger when the battery is fully charged.

Turning The Phone On / Off

Turn Phone On

- ◆ Press and hold the Power/End Key to turn on your phone.

Turn Phone Off

- ◆ Press and hold the Power/End Key to open the options menu.
- ◆ Select Power off> OK.

Making & Answering Calls

Placing a Call by Dialing

1. Press the **Power/End Key**, then enter the phone number with the keypad. Press the **Clear Key** to delete incorrect digits.
2. Press the **Send Key** to dial the number entered.

Ending a Call

During a call, press the **Power/End Key**.


Answering Calls

When you receive a phone call, press the **Send key** to answer the call.
You can also press the **Power/End key** to reject the call.

Ending Calls

During a call, press the **Power/End key**.

Getting to Know the Home Screen

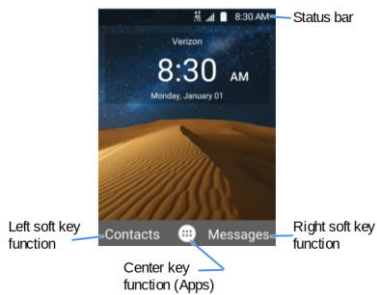

Call Features

Options available during a call.

Speaker	Press the Center Key to turn the speakerphone on/off.
Mute	Press the Right Soft Key to mute or unmute the microphone.
Add A Call	Select Options > Add call to make another call separately from the first call, which is put on hold.
Merge Calls	Select Options > Merge calls to merge the separate calls into a single conference call.
Swap	Select Options > Swap to put the caller you are speaking to on hold, and switch to the other call that has been put on hold.

Contacts

To see your contacts, from the home screen, select **Contacts**.

Checking Contact Details

- From the home screen, select **Contacts (Left Soft Key)** to access your contacts list.
- Scroll through the list to view all your contacts.
- Select a contact and then press the **Center Key** to view its details.

Adding a New Contact

- From the home screen, select **Contacts (Left soft Key)** > Select **Options (Left Soft Key)**.
- Select **New contact** to add a new contact.
NOTE: If you have no contacts added yet, select **CREATE A NEW CONTACT**.
- Enter the contact's name, phone numbers, email addresses and other information. (**To adjust input mode, hold down the # key**)
- To enter more information, select **ADD ANOTHER FIELD** at the bottom of the display and press the **Center Key**.
- Select **Options** > **Done** to save the contact.

Transferring Contacts

Using Bluetooth or Messaging

You can also quickly share your contacts using Bluetooth or Messaging.

Sharing Contacts

- From the home screen, select **Contacts**.
- Select **Options** > **Import/Export** > **Share visible contacts**.
- Choose to share via **Messaging** or **Bluetooth**. Phone will export your contacts into a vCard file.
- Follow the prompts on the display to send the vCard file.

Setting Up Voicemail Using *86

- Press ***86** and the **Send** key. Your phone will dial the voicemail number and you will hear voice prompt to guide you through the steps.
 - Press **1** for English, **2** for Spanish
 - Press **#** to confirm your language choice.
- Enter a password & press **#**. You will need to enter this password every time you listen to your messages.
- To select a greeting:
 - Press **1** for the standard greeting listing your phone number.
 - Press **2** for the standard greeting listing your name.
 - Press **3** to record a personal greeting.
- Once you have selected your greeting, you will be given final reminders. Then Press **2**. The voicemail system will ask you to choose:
 - Send a Message.
 - Check Receipt (to assure the message was received).
 - Personal Options.
 - Disconnect.**NOTE:** Using this method to set up your voicemail uses minutes from your plan.

Messages

Opening the Messaging Screen

From the home screen, select **Messages (Right Soft Key)**. The Messaging screen opens, where you can create a new message or open an ongoing message thread.

- Select **Options (Left Soft Key)** > **New message** to write a new text or multimedia message.
- Select an **Existing message thread** to open the conversation.

Sending a Message

- On the Messaging screen, select **Messages (Right Soft Key)** > **Options (Left Soft Key)** > **New message**.
- Add recipients in one of the following ways:
 - Select the **To** field and manually enter the recipient's number or the contact name. If the phone presents a few suggestions, select the one you want to add.
 - Select the **To** field and press the **Center Key** to select recipients from contacts, call history, or contact groups. **NOTE:** To remove a recipient, press the **Clear Key**.
- Use the **4-Way Navigation Key** to arrow down to the **input text** box at the bottom and type the content of your text message.
- If you want to send a multimedia message, select **Options (Left Soft Key)** > **Insert attach** to attach a photo or video to the message.
- Press the **Center Key** to select **SEND** for your message to be sent.
NOTE: Do not add an attachment if you want to send a text message. Otherwise, you may be charged for a multimedia message.

Replying to a Message

- On the **Messaging screen**, select the thread that has the message you want to reply to.
- Type your reply in the text box at the bottom. You can select **Options (Left Soft Key)** > **Insert attach** if you want to reply with an MMS.
- Press the **Center Key** to send.

Capturing a Photo



- From the home screen, select **Center Key** > **Camera**.
NOTE: You can also press the **Camera Key** from the home or apps screen to launch the Camera app.
- Aim the camera at the subject and make any necessary adjustments.
 - To use a filter effect, select **Options (Left Soft Key)** > **Filter** > arrow down to choose an option.
 - To access **White Balance**, **Brightness**, and **ISO**, select **Options (Left Soft Key)** > **White balance/Brightness/ISO**. Press the **Center Key**, and then choose an option.
 - To adjust camera settings such as picture size and video quality, select **Options (Left Soft Key)** > **Settings** then arrow down to choose an option.
- Press the **Center Key** or the **Camera Key** to take a picture.

Recording a Video

- From the home screen, select **Center Key** > arrow to **Camera**.
NOTE: You can also press the **Camera Key** from the home or apps screen to launch the Camera app.
- Press **left** on the **4-Way Navigation Key**, to switch to the camcorder. The shutter button will turn red.
- Aim the camera at the subject and make any necessary adjustments.
NOTE: You can press the **Volume Key** to zoom in or zoom out before and during recording.
- Press the **Center Key** or the **Camera Key** to start recording. You can also press the **Left Soft Key** to pause and resume recording.
- Press the **Center Key** or the **Camera Key** again to stop recording.

Speed Dial

Setting Speed Dials

You can press and hold the **1-9 Keys** in the home screen to call the corresponding speed dial number. The number **1 Key** is reserved to speed dial your Voicemail.

To assign a speed dial key:

- From the home screen, select **Center Key** > **Settings** > **Call settings** > **Speed dial**.
- Select a speed dial entry and then press the **Center Key**.
- Select a contact number from the contact list, and then press the **Center Key**.

Memory

Internal Memory: 4GB

Supports microSD memory card up to 32GB.